



Network Camera with Pan/Tilt PT3117、PT3127

Quick Installation Guide

This guide describes the basic functions of PT3117、PT3127. All detailed information is described in the user's manual.

6F., No. 192, Lien-Cheng Rd., Chung-Ho, Taipei County, Taiwan
Tel: +886-2-8245-5282 Fax: +886-2-8245-5532
E-mail: sales@vivotek.com <http://www.vivotek.com>



Warning Before Install

- Power off the Network Camera as soon as it is found smoking or smelt unusual.



Contact your distributor when such cases happen.

- Keep the Network Camera away from the water. If the Network Camera is wet, power off immediately.



Contact your distributor when such cases happen.


- Do not place the Network Camera around the heat sources, such as television or oven.




- Refer to your user's manual for the operating temperature.




- Keep the Network Camera away from the direct sunlight.

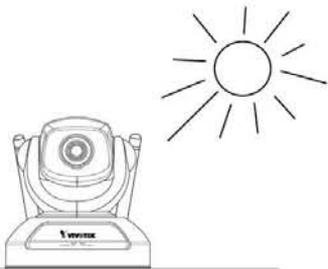


- Do not place the Network Camera in high humid environments.

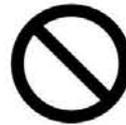


- Do not place the Network Camera on unsteady surfaces.

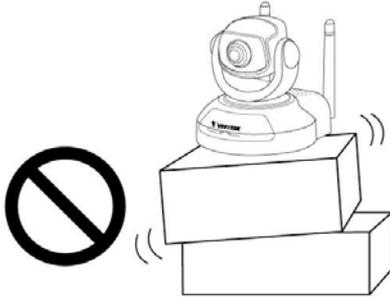


- Do not touch the Network Camera when it's lightning.

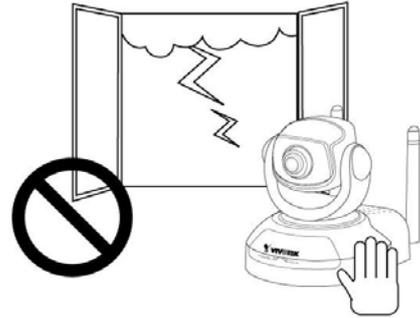


- Do not disassemble the Network Camera.

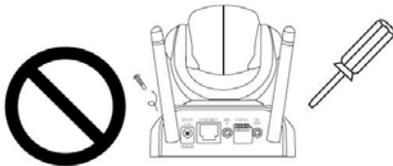


- Do not drop the Network Camera.

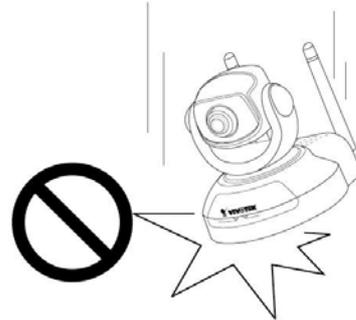

- Do not manually pan and tilt the Network Camera when the power is on.

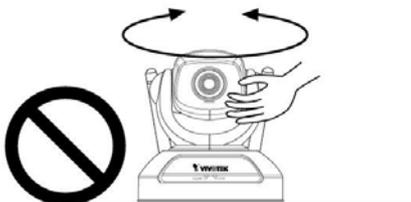

- Do not insert any object into the Network Camera, such as needles.

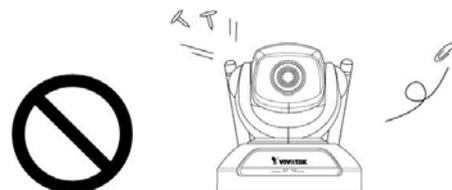

1 Check package contents

● PT3117、PT3127



● Camera stand



● Antennas




● Remote control




● Warranty card



● Power adapter

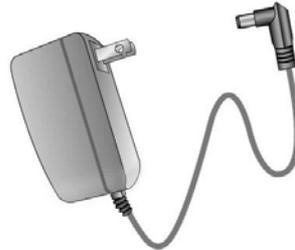

● A/V cable

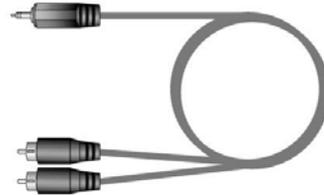

● Software CD




● Quick installation guide




2 Physical description


● Front panel

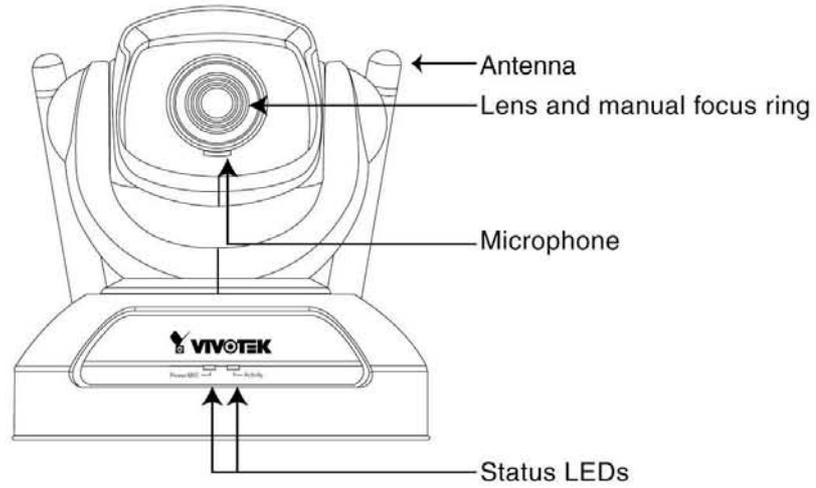

● Rear panel

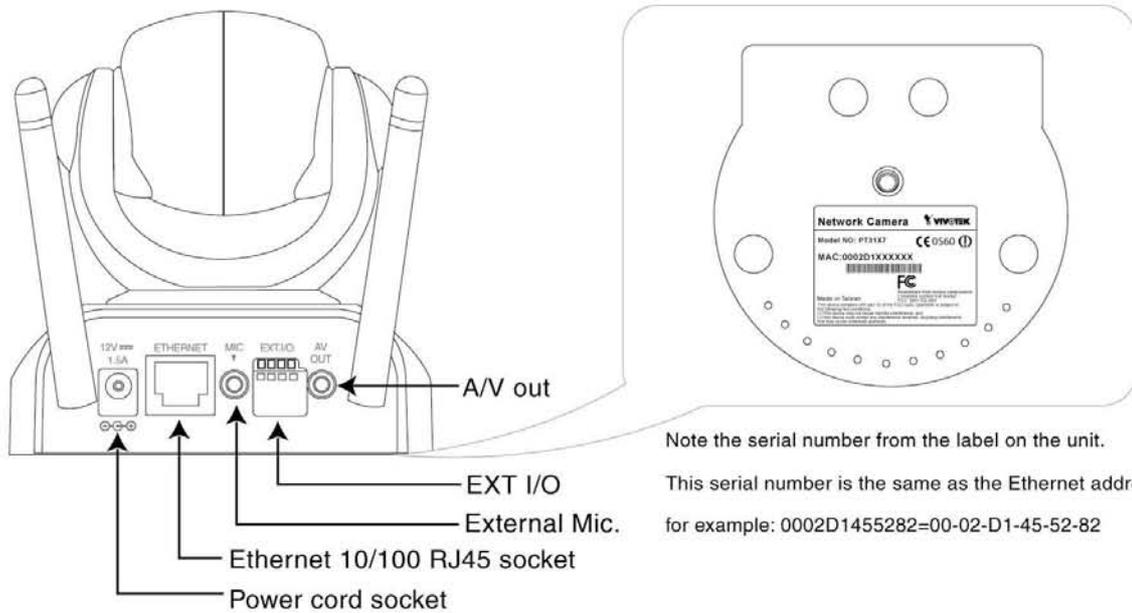

3 Install your Network Camera in Ethernet network

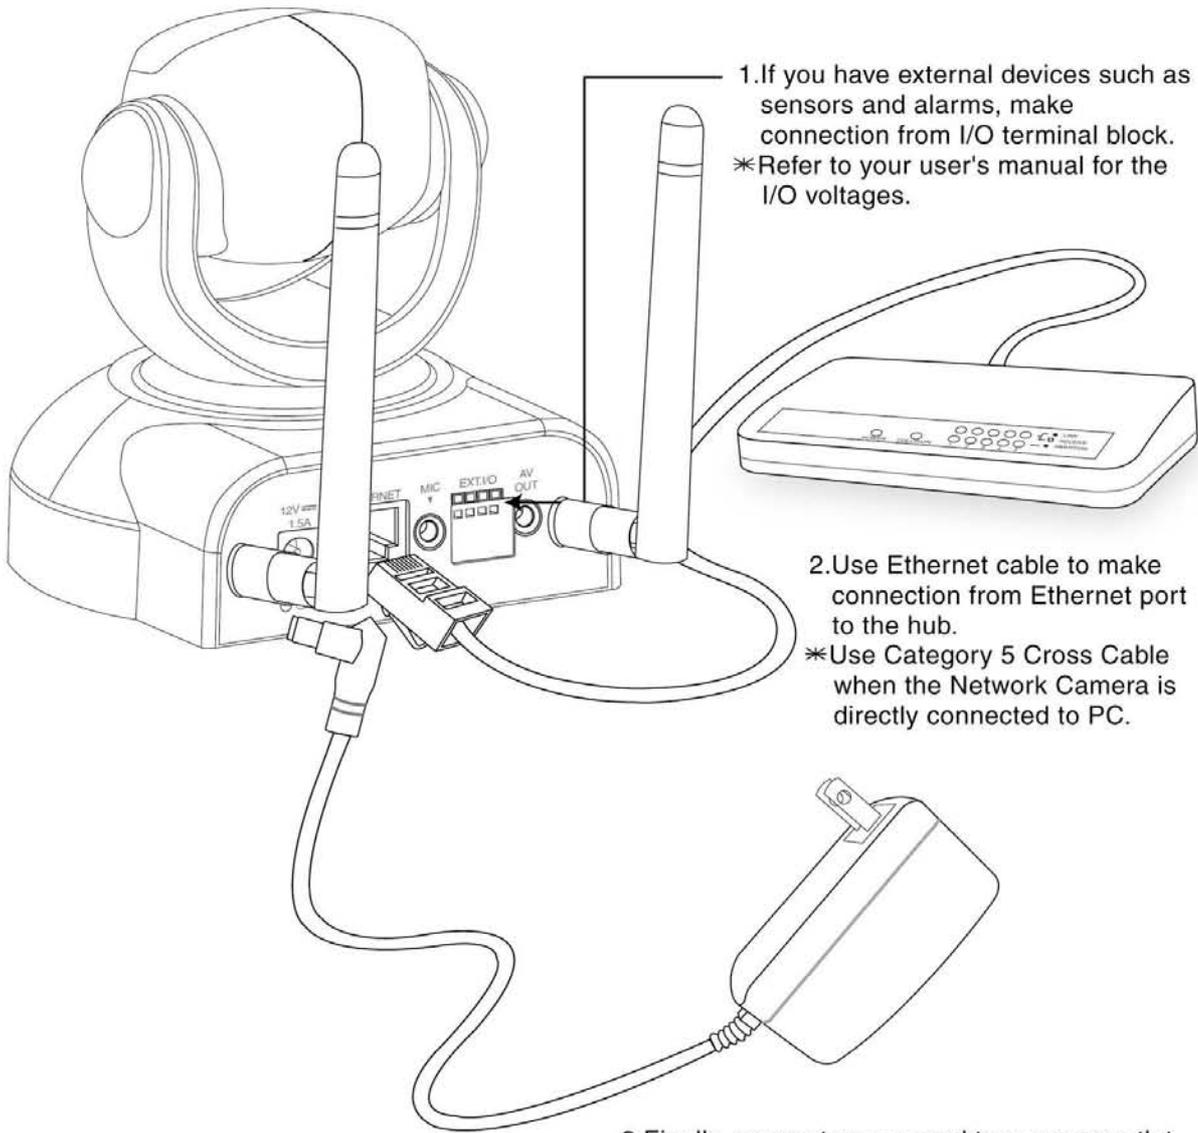


1.If you have external devices such as sensors and alarms, make connection from I/O terminal block.
*Refer to your user's manual for the I/O voltages.

2.Use Ethernet cable to make connection from Ethernet port to the hub.
*Use Category 5 Cross Cable when the Network Camera is directly connected to PC.

3.Finally, connect power cord to a power outlet.

4 Assign IP address

1. Run the "Installation Wizard" under "Utility" directory on the software CD.
2. The program will search Vivotek Video Servers or Network Cameras on the same LAN.

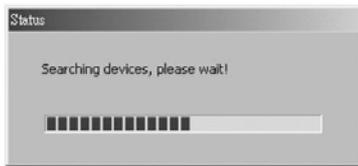


3. After searching, the main installer window will pop up. Click on the serial number that matches the one you just note from

2 Physical description

4. Click "Link to selected device" to connect the Internet Explorer to the Network Camera.

* If there is no DHCP server on the LAN, please refer to the user's manual for the methods of assigning an IP address.

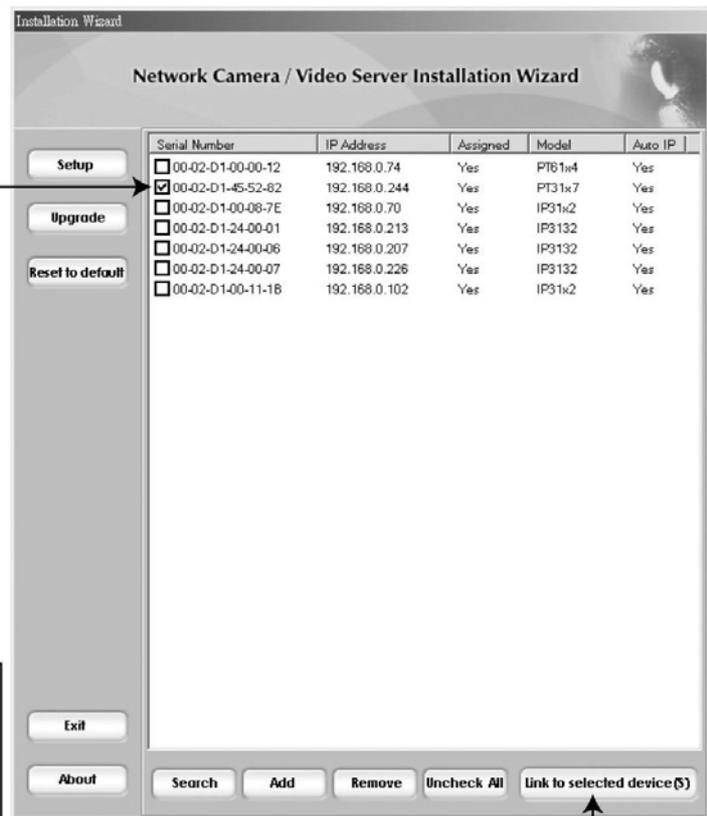

5 The Internet Explorer Connects to the Network Camera



For setup wireless mode and further configuration, please check user's manual on the software CD.